

# EPSON

## SC-F9500H Series

## SC-F9500 Series

# User Self Repair Guide

---

CMP0484-00 EN

## Copyrights and Trademarks

---

### **Copyrights and Trademarks**

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson printer. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

YouTube® and the YouTube logo are registered trademarks or trademarks of YouTube, LLC.

*General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.*

© 2024 Seiko Epson Corporation.

---

## Contents

### **Copyrights and Trademarks**

#### **Introduction**

Meaning of Symbols. . . . .	4
Illustrations and Photos Used in this Guide. . . . .	4

#### **Notes on User Self Repair Work**

What is User Self Repair Work. . . . .	5
When should I do this?. . . . .	5
Notes when Working. . . . .	6

#### **Notes on Safety**

#### **Work Flow**

#### **How to Start in User Self Repair Mode**

#### **How to Do Diagnosis**

Diagnosis Procedure. . . . .	10
How to Do Cleaning (Heavy). . . . .	10

#### **Replacing and Adjusting the Print Head**

Preparation. . . . .	11
Notes on Handling. . . . .	11
Notes on Storage. . . . .	11
Notes on Opening. . . . .	11
Correctly Holding the Print Head. . . . .	12
Do Not Touch These Areas. . . . .	12
How to Remove. . . . .	12
How to Install. . . . .	16
Process after Replacement. . . . .	19
About Used Print Head. . . . .	20
Confirm the Adjustment Results. . . . .	21

#### **Problem Solver**


What to Do When a Message Is Displayed. . . . .	22
When a Printer Error Occurs. . . . .	23


---


# Introduction

---


## Meaning of Symbols

 <b>Warning:</b>	Warnings must be followed to avoid serious bodily injury.
---	---

 <b>Caution:</b>	Cautions must be followed to avoid bodily injury.
---	---

 <b>Important:</b>	Important must be followed to avoid damage to this product.
---	---

<b>Note:</b>	Notes contain useful or additional information on the operation of this product.
--------------	--

	Indicates related content.
---	----------------------------

## Illustrations and Photos Used in this Guide

The illustrations or photos may differ slightly from the model you are using. Please be aware of this when using the manual.

---

# Notes on User Self Repair Work

---

## What is User Self Repair Work

In this manual, starting this unit in Self Repair mode to perform diagnostics and then replace User Self Repair parts is known as "User Self Repair Work".

## When should I do this?

Standard clogged nozzles can be cleared with a simple procedure.

Try reviewing the printer documentation first to fix the problem.

Regions other than North America and Latin America  
See "Troubleshooting & Tips" in the Online Manual.

### North America

To view user manuals, visit the support site for your region and search for your product.

- <https://www.epson.com/support> (U.S.)
- <http://www.epson.ca/support> (Canada)

### Latin America

To view user manuals, visit the support site for your region and search for your product.

- <http://www.latin.epson.com/support> (Caribbean)
- <http://www.epson.com.br/suporte> (Brazil)
- <http://www.latin.epson.com/suporte> (other regions)

User Self Repair operations should only be performed if the following issues persist even after taking corrective action.

- Head Cleaning causes other nozzles to become clogged.
- Nozzles are clogged on the area of the paper where printing starts.
- Nozzles become clogged when printing high-density areas.

## Notes on User Self Repair Work

# Notes when Working

Make sure you follow the notes below when performing user self repair work.

Failure to follow these notes may result in malfunction or damage to the printer or the Print Head. Doing so may invalidate the guarantee.

- Only replace User Self Repair parts when the Diagnosis determines that you need to replace the print head.
- Do not touch any parts other than those specified by the results of the diagnosis.
- The replacement Print Head is a precision instrument. Handle with the utmost care. Be careful not to lose it.
- Work within the following temperature and humidity ranges.  
15 to 30°C (59 to 86°F) 20 to 80%
- When performing this operation, connect the printer to the network and Epson Cloud Solution PORT.

## Notes on Safety

---

# Notes on Safety

---

This section lists precautions that must be taken to use the product safely and prevent damage to property or injury to operators or others.

Regions other than North America and Latin America : In addition, be sure to read the "Safety Instructions" in the *Setup Guide* (booklet) or the *Safety Instructions* (booklet), which is a separate manual.

North American and Latin American users: In addition, be sure to read the safety instructions in the online *Notices*.

### **Warning**

**Do not replace User Self Repair parts without having been trained for User Self Repair.**

An electric shock or injury could occur.

## Work Flow

---

# Work Flow

---

### 1. Start the printer in User Self Repair Mode

 ["How to Start in User Self Repair Mode" on page 9](#)



### 2. Run Diagnosis from the Repair Menu

Take measures according to the diagnostic results. In some cases, you may not need to replace the Self Repair parts, you may only need to perform Cleaning (Heavy) or clean the capping station.

 ["How to Do Diagnosis" on page 10](#)



When the diagnosis indicates that the Print Head needs to be replaced




When it is diagnosed that the capping station need cleaning



### 3. Replace the print head, and continue to adjust the print head

 ["Replacing and Adjusting the Print Head" on page 11](#)

### 3. Clean the capping station

 [User's Guide \(Online Manual\)](#)


 





## How to Start in User Self Repair Mode


# How to Start in User Self Repair Mode

You can check the procedure in a video on YouTube.  
[Epson Video Manuals](#)


- 1 Check that the printer's power is off.
- 2 While holding down the [  ] button on the operation panel, press and hold the  button for approximately 15 seconds.

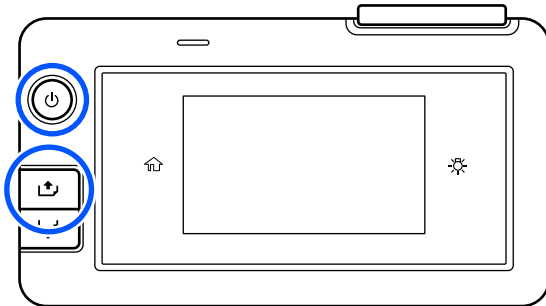

- 3 When the following screen is displayed, release all of the buttons and press **OK**.

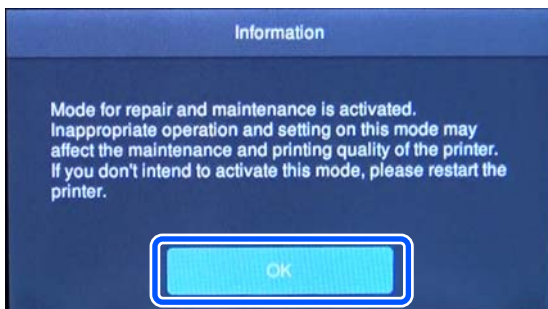

Starting is successful if User Self Repair Mode appears in the upper left of the screen, as in the illustration.

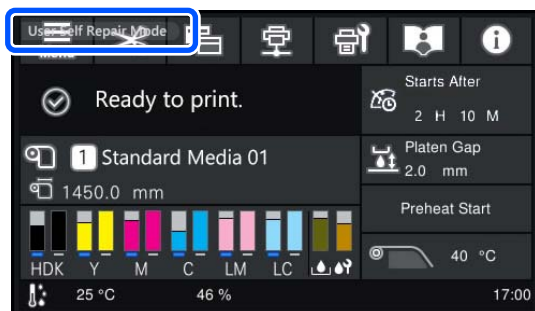


If it does not appear, turn off the power and redo the procedure from step 2.

## How to Do Diagnosis

# How to Do Diagnosis

## Diagnosis Procedure

**1** Start the printer in User Self Repair Mode.  
[☞ “How to Start in User Self Repair Mode” on page 9](#)

**2** Press in the order of  (menu) - **Maintenance - Repair Menu - Diagnosis**.

**3** Press **Start**.  
 Wait until the diagnosis results appear on screen.

**4** The diagnosis results appear on screen.  
 Scroll down the screen to check the diagnosis results for the capping station and the Print Head.

### When Cleaning (Heavy) needs to be executed

Make a note of the rows that need cleaning. Press **Close** to exit **Diagnosis**, and then perform **Cleaning (Heavy)**.



[☞ “How to Do Cleaning \(Heavy\)” on page 10](#)

### When Head Cleaning does not need to be executed

Press **Next** to check the diagnostic results. Take measures according to the diagnostic results.

- When the Print Head needs to be replaced  
[☞ “Replacing and Adjusting the Print Head” on page 11](#)
- When the capping station need to be cleaned  
[☞ User's Guide \(Online Manual\)](#)

## How to Do Cleaning (Heavy)

**1** Press  (Home), and then press in the order of  (menu) - **Maintenance - Head Cleaning - Cleaning (Heavy)**.

**2** Select the rows that you noted needed cleaning when you executed **Diagnosis**.

Selecting **All Nozzles** cleans all the rows.

**3** Check the message, and then press **Start**.  
 Cleaning starts. When cleaning is finished, we recommend that you select **Yes** on the confirmation screen, and then print a nozzle check pattern to confirm that the clogging has been eliminated.

### If clogging is cleared

Go to step 4.

### If clogging is not cleared

Return to step 1, select **Cleaning (Heavy)** again, and execute cleaning for the rows that have gaps in the check pattern.

If the clogs are not cleared after executing **Cleaning (Heavy)** 2 times, execute **Diagnosis** again.

[☞ “Diagnosis Procedure” on page 10](#)

**4** Turn off the power to the printer, and start it normally.

**5** Send an actual print job to confirm if the print results are improved.

### **Important:**

*Print jobs cannot be received while in User Self Repair Mode. Be sure to restart in the normal way before you send a print job.*

If the print results are not improved, execute **Diagnosis** again.

[☞ “Diagnosis Procedure” on page 10](#)

## Replacing and Adjusting the Print Head

# Replacing and Adjusting the Print Head

### **Important:**

*You should only replace the Print Head when instructed to do so by the Diagnosis results.*

*Replacing the part without a confirmed diagnosis may cause malfunction or damage to the printer or the Print Head. Doing so may invalidate the guarantee.*

## Preparation

Use the following to do replacement work.

### Replacement Print Head

Do not remove it from the protective case until just before replacement.

### **Gloves (provided with replacement Print Head), protective glasses and mask (commercially available)**

Prevent ink from coming into contact with your skin or from entering your eyes or mouth.

### Media for adjustments

Prepare the media specified during User Self Repair training.

Premium Glossy Photo Paper (250) (product number: S041638)

### Empty waste ink bottle

When replacing the print head, the ink in the printer will be drained and then refilled. Prepare an empty waste ink bottle as a large amount of ink will be drained.

## Notes on Handling

Print Heads are precision components.

When handling them, follow the procedures and precautions in this manual.

## Notes on Storage

- Do not open the outer carton or the protective case before doing replacement work. There is a risk of lint or dust getting on the nozzle surfaces and ink supply ports.
- Store them in the following environment, away from direct sunlight.  
-20°C to 60°C (-4 to 140°F) (without condensation)
- Do not store in damp location.
- Store correctly in upright orientation.
- Do not stack more than 3 boxes.


## Notes on Opening

- Confirm the box is upright before opening it.
- Use the outer carton, plastic bag, and protective case to pack the used Print Head to send it to your dealer or Epson Support. Open them carefully without tearing anything.
- Do not open the protective case until you are ready to replace the Print Head. There is a risk of lint or dust getting on the nozzle surfaces and ink supply ports.

## Replacing and Adjusting the Print Head

### Correctly Holding the Print Head


When replacing the Print Head or removing it from its protective case, use both hands and hold it at the positions shown in the photos.

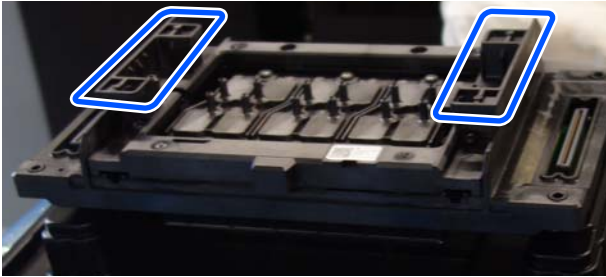

### Do Not Touch These Areas

Do not touch the areas outlined in the following illustration when handling the replacement Print Head. Otherwise, a malfunction may occur.

#### Connectors (left/right) and ink supply ports

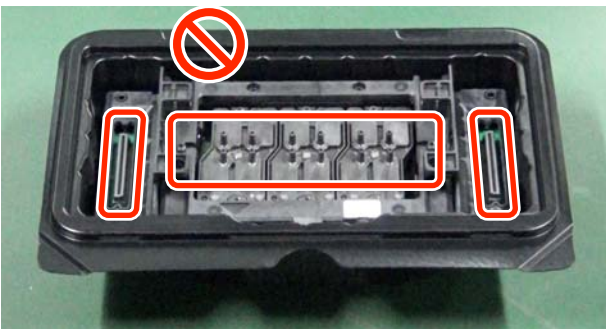

#### Nozzle surfaces (bottom side of Print Head)



### How to Remove


You can check the procedure in a video on YouTube.

[Epson Video Manuals](#)

#### **Important:**

*Touch a metal object before starting operations to disperse any static electricity from your body.*


- 1 When **Replace the print head.** is displayed on the diagnosis results screen, press **Replace Print Head.**

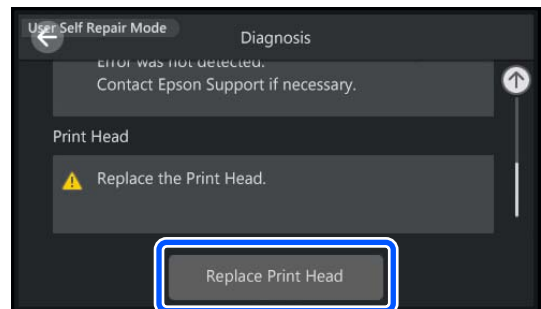


 [“Diagnosis Procedure” on page 10](#)

## Replacing and Adjusting the Print Head


- 2** Check the on-screen messages, and then press **Start**.

If you need to cancel the operation, press .

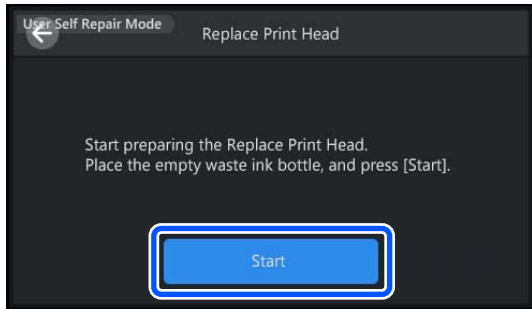


Install the empty waste ink bottle if it is not already installed.


See the following for instructions on installing the waste ink bottle.

 [User's Guide \(Online Manual\)](#)

- 3** Check the on-screen messages, and then press **Start**.

If you need to cancel the operation, press .

Press **Start** to begin the preparations for replacing the print head.

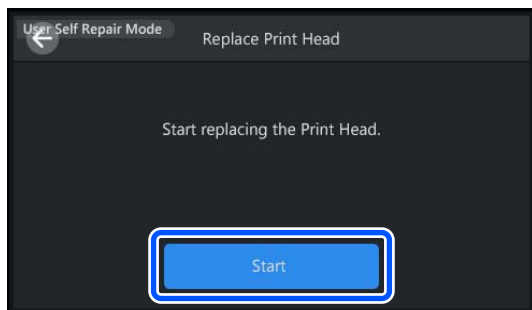

- 4** When the following message is displayed on screen, turn off the power to the printer.

**After turning off the power, replace the print heads.**

**The replacement should be completed within 30 minutes.**

**If replacement takes too long, clogged nozzles may not improve.**

- 5** Unplug the power cable connected to the right of the printer from the electrical outlet.


 **Important:**

*After unplugging the power plug, press the power button.*


*The power LED (white) and the screen on the operation panel will turn on and then immediately turn off. This disperses any residual charge and allows the replacement procedure to be performed without difficulty.*

- 6** Put on the protective glasses and mask.

- 7** Open the maintenance cover on the right.

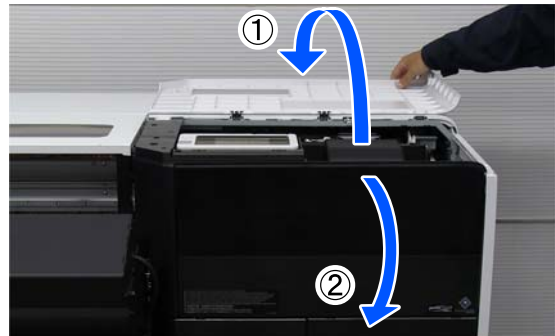

- 8** Loosen the screw on the carriage cover shown in the photo by hand.

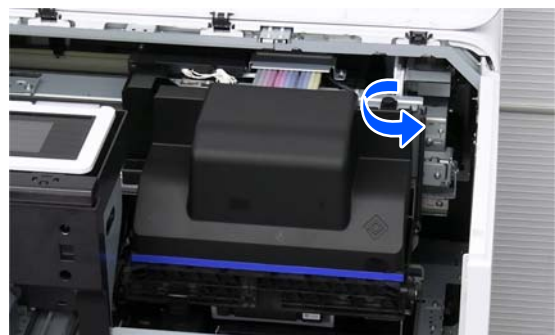


### Replacing and Adjusting the Print Head

- 9** Open the carriage cover towards you and remove it.





- 10** Turn all the fixing levers (4 locations) sideways to release the locks of the Ink Damper Unit.

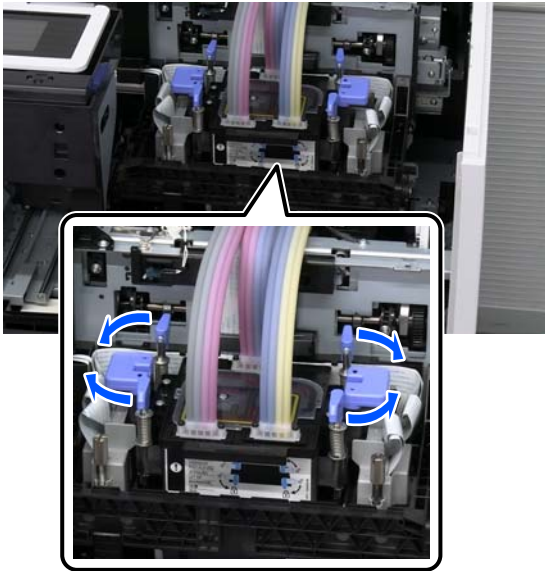

- 11** Lift the Ink Damper Unit and place it on the maintenance cover with the bottom of the Ink Damper Unit facing up.

Lift the Ink Damper Unit straight up with both hands while moving it up and down a little.


Turn over the Ink Damper Unit and hang it temporarily on the hook.

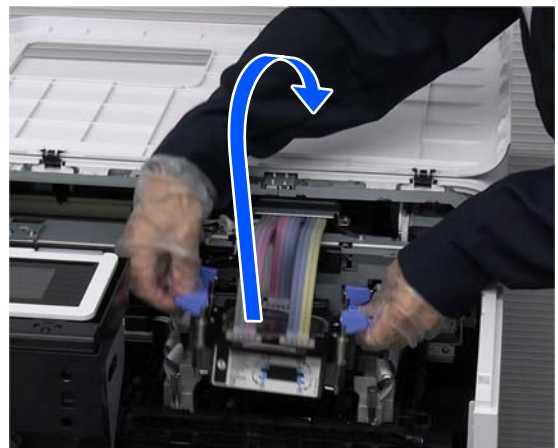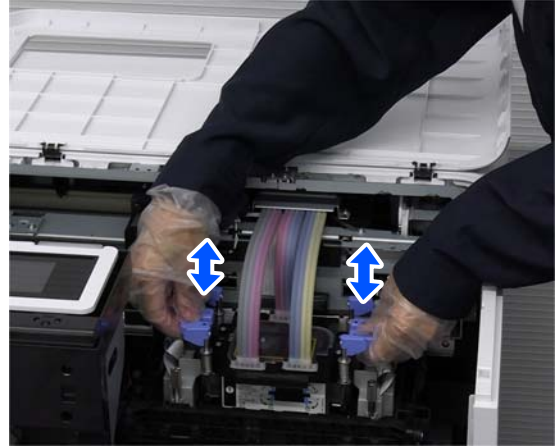

## Replacing and Adjusting the Print Head


**! Important:**

- ❑ Do not pull the ink tubes connected to the Ink Damper Unit too hard. If they become deformed, a malfunction may occur.
- ❑ Do not touch the bottom of the Ink Damper Unit. There is a risk of deforming the ink supply ports.

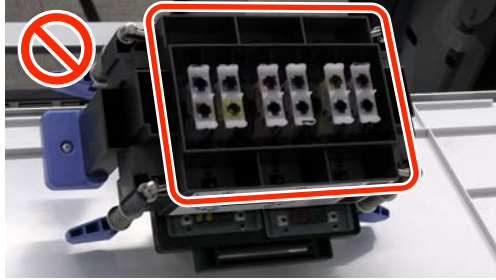

**! Important:**


Hold down the Print Head as you remove the connector so the connector's pins are not deformed or damaged.

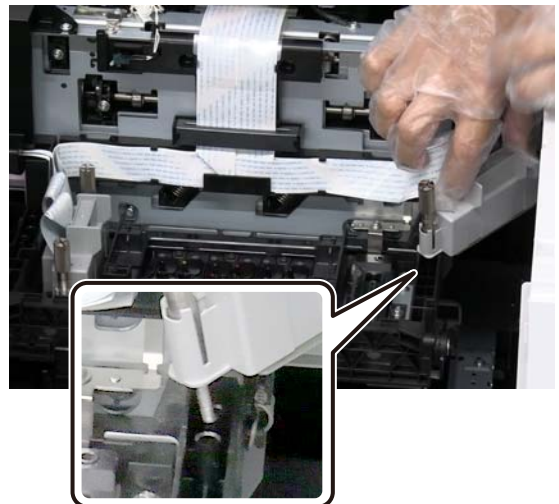

- 12** Use your fingers to turn the connector fixing screws (4 pc) counterclockwise to loosen them.

If you cannot loosen the screws with your fingers, use a coin or flathead screwdriver to loosen them.

You can loosen the screws, but they cannot be removed from the connector.

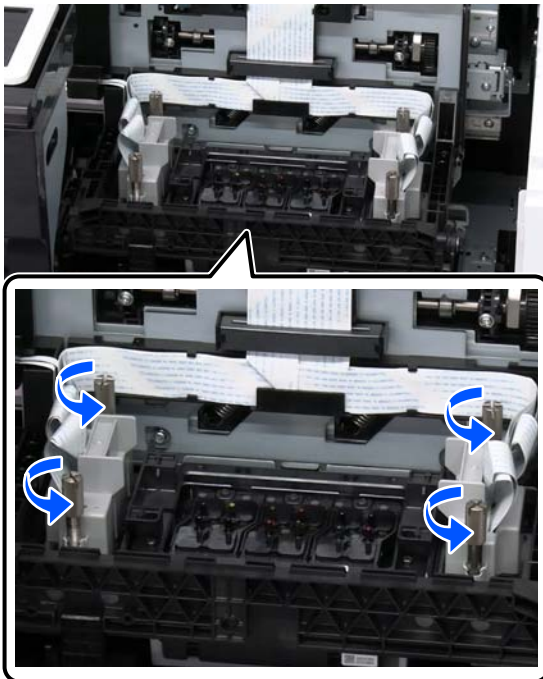

- 13** Lift the right side connector straight up to remove it, and place it on the holder.

Insert the tip of the screw into the hole in the holder.

## Replacing and Adjusting the Print Head

- 14** Remove the left side connector in the same way, and place it on the holder.



- 15** Open the protective case of the replacement Print Head, and place it so the inside of the lid is facing upwards.



Later, you will place the used Print Head that you removed on the upside down lid.

- 16** Use both hands to lift the Print Head straight up and remove it.

Hold the Print Head correctly.

[“Correctly Holding the Print Head” on page 12](#)



- 17** Place the used Print Head that you removed on the lid of the protective case.



## How to Install

Install it by reversing the procedure used for removal. You can also check the procedure in a video on YouTube.

[Epson Video Manuals](#)

Hold the Print Head correctly.

[“Correctly Holding the Print Head” on page 12](#)




## Replacing and Adjusting the Print Head

**! Important:**

Do not touch the areas you should not touch while handling the replacement Print Head.

 "Do Not Touch These Areas" on page 12

- 1 Use both hands to take the replacement Print Head out of the protective case and install it in the printer.

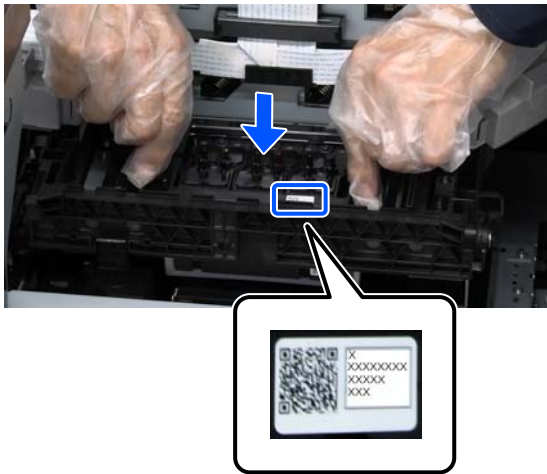

Install it as shown above so that the label can be seen towards the front.

**! Important:**


- Immediately install the Print Head to the printer after removing it from the case. There is a risk of lint or dust getting on it.
- Placing the nozzle side on a surface can cause malfunctions.

- 2 Connect the left and right connectors.  
Lightly press on the top of the connectors to assure they are inserted.




- 3 Use your fingers to turn the fixing screws (4 pc) clockwise to secure the connector.

User your fingers to tighten the screws until they stop turning.

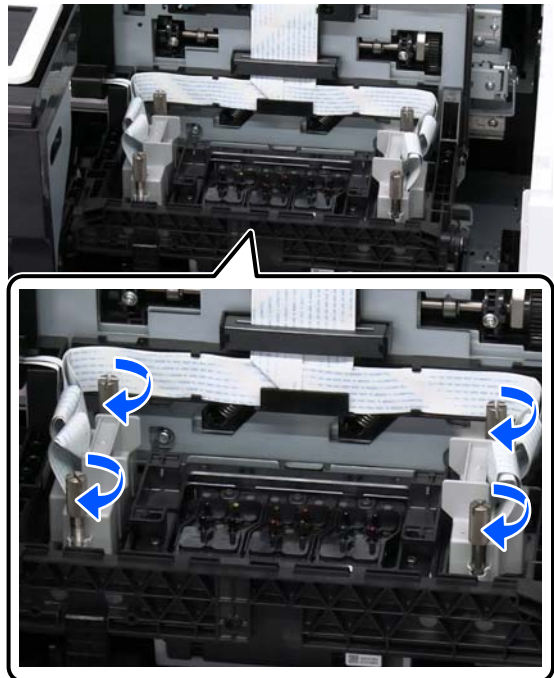


### Replacing and Adjusting the Print Head

- 4** Hold the Ink Damper Unit in both hands, and install it on the Print Head.

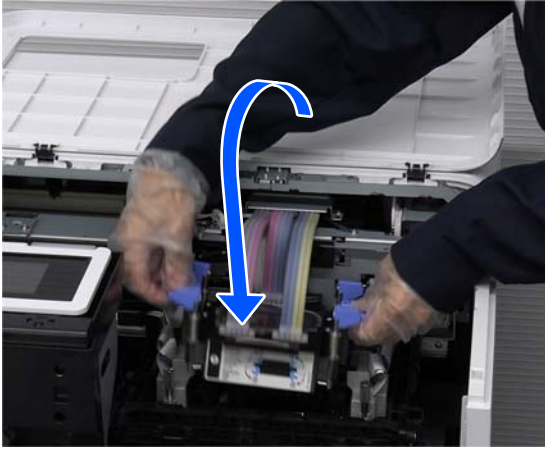


**!** **Important:**

- ❑ Do not touch the bottom of the Ink Damper Unit. There is a risk of deforming the ink supply ports.

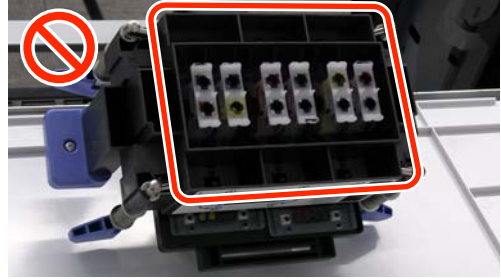


- ❑ Take care when performing operations so that you do not drop the Ink Damper Unit on to the Print Head. Otherwise, the ink supply pins in the Print Head could be damaged.

- 5** Lightly press on the handles of the Ink Damper Unit to assure it is installed.

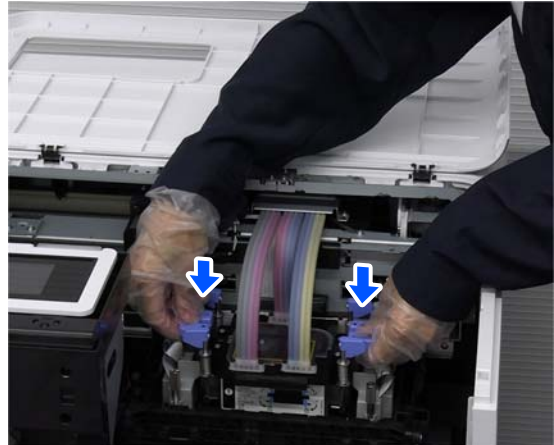

## Replacing and Adjusting the Print Head

- 6** Turn all the fixing levers (4 locations) back lengthwise to lock them.

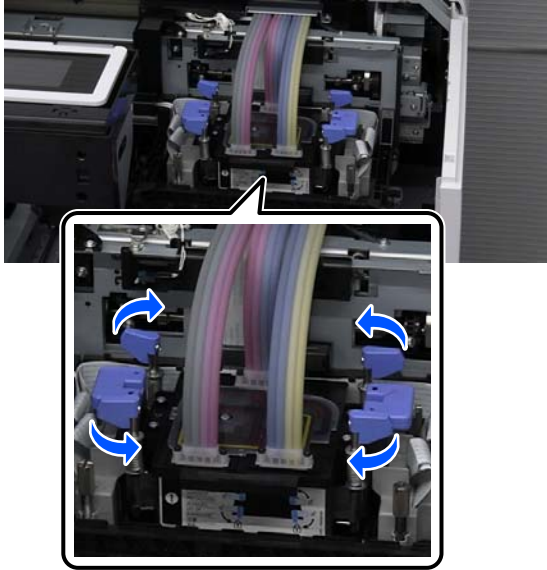

**!** **Important:**


*Be sure to lock all the fixing levers.*

*If they are not locked, ink could leak when the printer is used.*

- 7** Close the carriage cover.

**!** **Important:**

*Make sure the carriage cover is securely locked.*

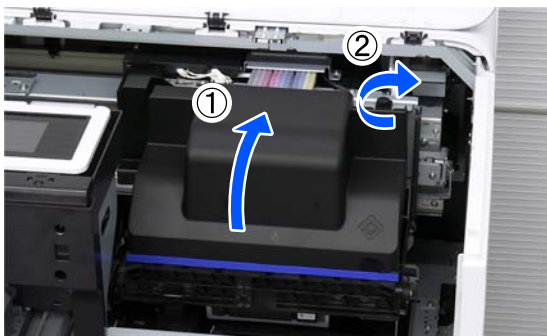

- 8** Close the maintenance cover on the right.  
About Used Print Head

[🔗](#) “About Used Print Head” on page 20

## Process after Replacement

When Print Head replacement is complete, perform operations in the following order. Follow the on-screen instructions.

**Fill the Print Head with ink**




**Print a nozzle check pattern to check if nozzles are clogged**



**Perform automatic adjustments**


**!** **Important:**

*Do not unplug the power plug from the outlet or trip the circuit breaker during the following operations. Otherwise, operations may not be performed correctly and a malfunction may occur.*


- 1** Load the adjustment media in the printer.  
You do not need to load the media in the take-up unit.  
Loading Media [🔗](#) *User's Guide* (Online Manual)
- 2** Connect the power cable plug to an electrical outlet.
- 3** Press the  button to turn on the printer.

## Replacing and Adjusting the Print Head


- 4** Check the on-screen message, and then press **OK**.

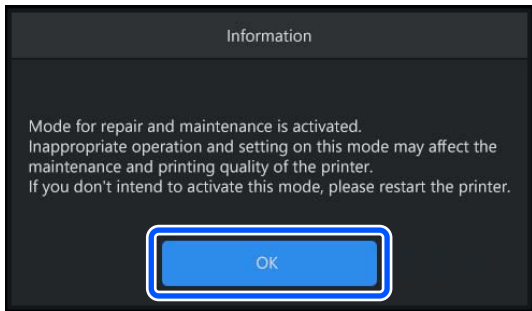

- 5** Clean the capping station.  
When cleaning is complete, press **Start**.  
Press **How To...** to view the cleaning procedure.

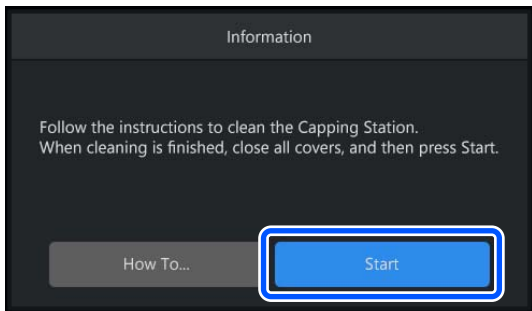

- 6** When the screen switches to **Print Head Nozzle Check**, check the print position of the pattern, and then press **Start**.  
The nozzle check pattern is printed.

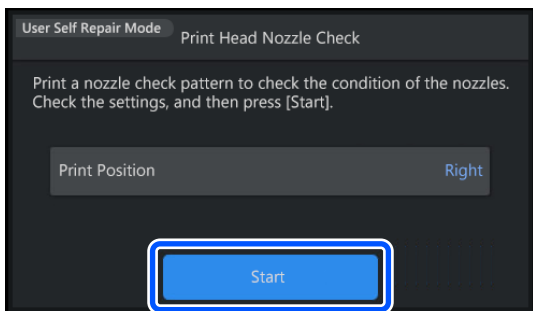

- 7** Check the nozzle check pattern.  
**If there are no clogged nozzles**

Select .

**If there are clogged nozzles**

Select , and then do **Head Cleaning** until the clogged nozzles are cleared.

First, perform **Cleaning (Light)**. Print a nozzle check pattern, and if the nozzles remain clogged, perform **Cleaning (Medium)**. Print a nozzle check pattern again, and if the nozzles are still not cleared, perform **Cleaning (Heavy)**.

- 8** When the screen switches to **Print Head Alignment**, you can continue with the adjustment process.

Press **Start** to start automatic adjustments.

Adjustments are performed automatically while printing the adjustment pattern.

When the screen display returns to the home screen, all the adjustment work is complete. If the adjustments are not complete and an error is displayed, follow the on-screen instructions to make manual adjustments.

## About Used Print Head

Pack the used Print Head according to the following procedure, and then contact your dealer or Epson Support.

### How to Pack

- 1** Apply commercially available adhesive tape to the contacts of the connectors on the used Print Head.

Be sure to apply the tape so that any ink left in the nozzles cannot leak out during transport and get into the contacts of the connectors.



- 2** Put the Print Head into the protective case and close the lid.

## Replacing and Adjusting the Print Head

- Put the protective case in the plastic bag that came with the replacement Print Head, and then put it all in the outer carton and seal it with adhesive tape.  
Pack it securely so that the Print Head does not come out of the box during transport.

## Confirm the Adjustment Results

- Turn off the power to the printer, and start it normally.
- Send an actual print job to confirm if the print results are improved.

**Important:**

*Print jobs cannot be received while in User Self Repair Mode. Be sure to restart in the normal way before you send a print job.*

If there are problems with the print quality, perform **Media Settings - Print Adjustments**. For details on **Print Adjustments**, see the *User's Guide* (Online Manual).

If the problem is not eliminated by doing **Print Adjustments**, contact your dealer or Epson Support.





## Problem Solver

# Problem Solver

## What to Do When a Message Is Displayed

If the printer displays one of the messages shown below, refer to the solution listed and take the necessary steps.

If messages that are not shown in the following table appear and you are uncertain about how to solve the problem, see the *User's Guide* (Online Manual).









Message	What to do
The print heads have not been replaced. Turn off the power and replace the print heads with new ones. Then start in User Self Repair Mode.	<p>It is possible that the Print Head you replaced may not be new. Turn off the printer, replace the Print Head with a new one, and then start the printer in User Self Repair Mode.</p> <p> <a href="#">"Replacing and Adjusting the Print Head" on page 11</a></p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>
A used print head is set. Turn off the power and replace the print heads with new ones. Then start in User Self Repair Mode.	<p>It is possible that the Print Head you replaced may have been used. Turn off the printer, replace the Print Head with a new one, and then start the printer in User Self Repair Mode.</p> <p> <a href="#">"Replacing and Adjusting the Print Head" on page 11</a></p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>

## Problem Solver

# When a Printer Error Occurs

See the following table and take the appropriate actions for the printer error code (6-digit number shown at the bottom of the screen).

If printer error codes that are not shown in the following table appear, see the *User's Guide* (Online Manual).

Printer error number	What to do
002100	<p>Turn off the printer, and then restart it in User Self Repair Mode.</p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>
002200, 002201, 002205, 002207	<p>The connector may not be connected correctly to the Print Head.</p> <p>Turn off the printer, reconnect the connector correctly, and then start the printer again in User Self Repair Mode.</p> <p> <a href="#">"Replacing and Adjusting the Print Head" on page 11</a></p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>
002202, 002204, 002206, 002208, 002209, 00220A	<p>Contact your dealer or Epson Support for assistance. Tell them the printer error code is "XXXXXX".</p>
002203	<p>A Print Head has been installed that is not for the printer.</p> <p>Turn off the printer, and then replace the Print Head with one that is for the printer.</p> <p> <a href="#">"Replacing and Adjusting the Print Head" on page 11</a></p> <p>Do not reuse the Print Head that was mistakenly installed. The colors of ink could mix and harden, resulting in lower quality. Dispose of it like a used Print Head.</p> <p> <a href="#">"About Used Print Head" on page 20</a></p> <p>After finishing the replacement, start the printer in User Self Repair Mode.</p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>
00220D	<p>The carriage cover may not be closed properly.</p> <p>Turn off the printer, close the carriage cover properly, and then start the printer in User Self Repair Mode.</p> <p> <a href="#">"Replacing and Adjusting the Print Head" on page 11</a></p> <p> <a href="#">"How to Start in User Self Repair Mode" on page 9</a></p>