

Scanner maintenance: SA61A



Cleaning the scanner

1. Use a lint-free cloth


Caution!

Do not use abrasives, acetone or benzine
Do not spray liquids directly in the scanner



Table alignment test

1. Empty and clean the table
2. Click the 'Settings' icon in the software (top right corner)
3. Click the 'Table alignment test...' button
4. Follow the instructions in the software guide

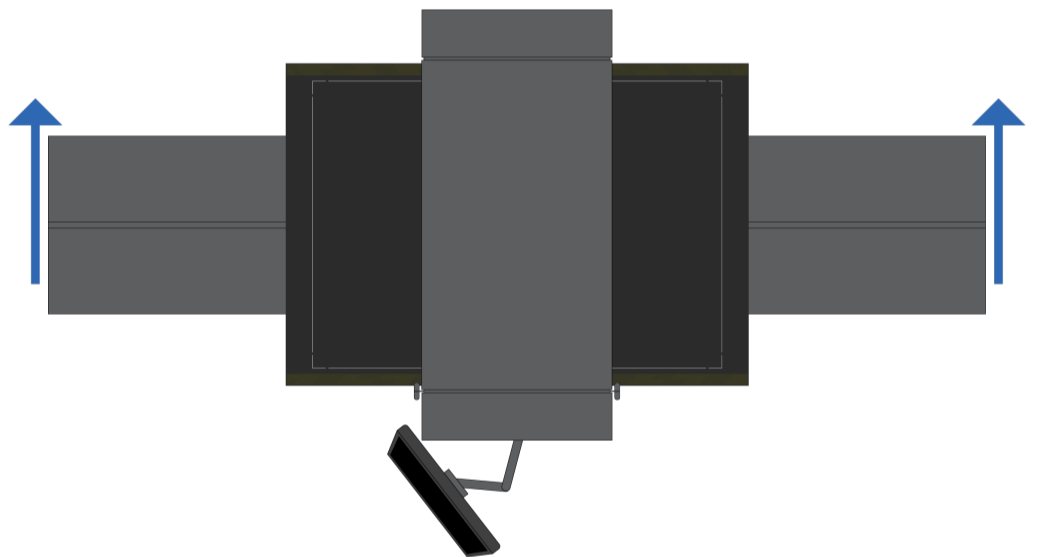

Calibration

1. Empty and clean the table
2. Click the 'Settings' icon in the software (top right corner)
3. Click the 'Calibrate...' button
4. Follow the instructions in the software guide

